

Hitachi "R35" Ignition Coil

- With built-in ignitor
- Includes plug and pins



HARNESS SIDE VIEW

TERMINATION	
1	ECU Ignition Output
2	Ground
3	Power (+12V switched)



Example of Harness Side View

Warning!

This coil **MUST** have a ground path when firing, DO NOT operate the Engine/Coil without a grounded spark plug attached. Failure to do so will damage the coil resulting in no spark or low spark energy

 
"Spark Edge" must be set to FALLING before connecting the coil, Failure to do so will damage the coil resulting in no spark or low spark energy

SOFTWARE SETTINGS								
Spark Edge			Falling Edge					
Dwell Mode			Constant Charge					
Ignition Dwell Time								
Volts	9.00	10.00	11.00	12.00	13.00	14.00	15.00	16.00
ms	3.300	3.229	3.157	3.086	3.014	2.943	2.872	2.800




VIDEO: How To Crimp Like A Pro

<http://bit.ly/haltechcrimp>



 Use Crimper set HT-070300 to crimp the pins in this package



(1) Crimp Pin to wire and then
(2) insert into harness side of Plug

HT-020106

Revision #1

