

podtec

Vehicle Storage System



USER MANUAL

Contents

Welcome to the Podtec Vehicle Storage System.

Firstly check your **contents** of the system you have purchased are present



Contents:

Single fan unit

Size 1:

260cm x 75cm x 169cm pod

Size 2:

300cm x 75cm x 169cm pod

Replacement Filter
Storage Bag



Contents:

Single fan unit

Size 1: 320cm x 150cm x 169cm

Size 2: 425cm x 200cm x 169cm

Size 3: 425cm x 160cm x 169cm

Twin Fan unit

Size 4: 470cm x 200cm x 169cm

Size 5: 505cm x 200cm x 169cm

Size 6: 560cm x 200cm x 169cm

Replacement Filter
Storage Bag



Contents:

Single fan unit

Electric Air pump

External Size: 500cm x 280cm
x 200cm

Vehicle Entry Size: W230cm x
H175cm

Replacement Filter
Storage Bag

Length x Width x Height

Power supply required:

Suitable for UK 3 pin 240v
power supply.

Useful Information

Do's and don'ts and other useful information

If the car / bike pod is inflated for 24hrs before being used to store your vehicle, it will help remove any storage creases and make it easier to pull over your vehicle the first time.

These are indoor storage systems and the quality of the pod may degrade if left outside direct to the elements.

Place on a flat surface and do not allow any object to pierce pod.

DO NOT position next to a direct heat source.

Check the area you are inflating your pod for size, not forgetting height.

Make sure you have the correct power source.

Make all the filters are correctly installed.

The pod must be inflated and stay inflated to work correctly.

DO NOT store vehicles with oil/fuel leaks as the oil/fuel will degrade the pod.

Never store fuel cans or chemicals inside the pod.

DO NOT run the engine inside the pod.

Try and keep the surrounding temperature as constant as possible.

If possible, keep filters away from garage doors.

Check your vehicle condition regularly including the tyres (do not allow to go flat).

Make sure the vehicle is clean before storage as road salts are highly corrosive.

How to erect your pod



Scan to view how to erect your pod video

How to erect your bike or car pod:

- First, unpack and roll out your new car or bike pod.
- Make sure to fully unfold the pod. A second person may be helpful.
- Insert the power cable through the small opening below the fan hole.
- For units with two fans you'll find a splitter cable included.
- You'll need to connect this to the power cable inside the pod.
- Connect the splitter cable to each fan and attach the power cable.
- Next insert the fan ensuring that the vents are pointing down.
- Check that the Velcro creates a good seal.
- Unzip the clear top from the base and fold back.
- Do this carefully in sections, making it easier to pull over the vehicle.
- Double check that the base is lying flat with no major creases.
- Next roll your vehicle onto the base. Keeping it central.
- Carefully unfold and pull the clear top over the vehicle.
- Take care around mirrors, aerials and body work to avoid snags.
- Zip all the way around, ensuring the two zips meet.
- Finally connect the power and inflate your car pod.
- As it inflates, you may need to give it a helping hand to avoid any snags.

Inflation time will vary depending on the size of your pod.

Any creases will drop out over time, but you can speed up this process by using a hand steamer if desired.

To deflate your pod simply unzip and reverse the process.



Unpack



Roll out



Position vehicle




Carefully roll cover over



Zip up



Connect power - Inflate with fan

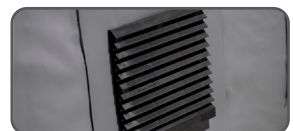

How to erect your pod



Unpack



Roll out



Inflate



Position vehicle



Zip up



How to erect your Evo pod:

- First, unpack and roll out your new Evo pod.
- Make sure to fully unfold the Evo pod.
- Connect the air pump and inflate the framework. This takes approximately 3 minutes.
- As it inflates, you may need to give it a helping hand.
- Carefully put the vehicle into position inside the pod.
- Zip up your Evo pod.
- Next insert the fan ensuring that the vents are pointing down.
- Check that the Velcro creates a good seal.

Any creases will drop out over time, but you can speed up this process by using a hand steamer if desired.

To deflate your pod simply unzip and reverse the process.



Scan to view how to erect your pod video



podtec

Vehicle Storage System

Exclusive UK Distribution by Demon Tweaks, 75 Ash Road South, Wrexham Industrial Estate, Wrexham, North Wales. LL13 9UG